STS Off-Line Calibration

ORDA Systems Engineering

ABSTRACT:

These are the STS calibrations the technician performs to ensure system parameters are correct. These procedures include validating path loss calibrations and testing system calibration. These tests help a technician isolate problems and give the ability to view calibration results without waiting for an Automatic Calibration interval.

STS Off-Line Calibration	
Tests	1
Procedures	
Sun Check	2
	5
•	
Dynamic Range	3
MDS	3
Noise	3
Noise Temperature	11
Clutter Suppression	
RFD	14
CW Substitution	
Test Attenuator	
Velocity/Spectrum Width Processing	21
Velocity/Spectrum Width	21
Transmitter Power	
RF Test Switch	Error! Bookmark not defined

Tests

- STS
- Off-Line Calibration uses System Test Software (STS) to perform all it's functions. This is the off-line maintenance software
- Test Names
 - o Each test is independent, although some of the tests need data from other tests. Selecting one test will run all the tests needed for input data.
- Use
 - o These tests will be used by the technician to:
 - isolate problems with the radar
 - verify system calibration
 - run specific calibrations on demand
 - These tests provide more information than available with the On-Line calibrations for use by technicians and engineers.
 - We can see all the parameters used in the equations, and the standard deviations for determining measured "goodness".
- Alarms
 - o These Calibration routines use the same library calls as the on-line calibrations do, so they set and clear alarms when they're called.

O When you leave STS, the alarm status will depend on the last alarm status of any calibration test you ran. That is, if you entered STS with a calibration alarm (say Noise Temp Degraded), but after performing the Off-Line Calibration (Run Noise Temp for the example) the alarm clears, when you exit STS the alarm will be cleared (no more Noise Temp alarm).

Procedures

Sun Check

Top of the Document

- Purpose
 - o Accurate position of the sun, noise of sun to calibrate antenna/radome gain
- Description
 - o 2 Parts
 - Positional Accuracy
 - Raster scan across sun, parabolic curve fit for exact location
 - Antenna must be within .3° to find sun
 - Gain Check
 - Noise temp of sun, compared to sun flux
 - o Setup
 - o Parameters/Description
 - Algorithm

Short Pulse Reflectivity Error Estimate

- Purpose
 - \circ Estimates the errors in DBZ₀ related to power, noise, calibration linearity, and path in short pulse, the variables for dBZ₀ that change most pulse to pulse.
 - o Provides troubleshooting guidance:
 - Power error transmitter
 - Noise error shared path, IFD, external interference
 - Shared Path shared path, critical path
 - I₀ Test Attenuator, non-linear response from LNA or Mixer/Preamp
 - dBZ₀ bad R234, problem with another constant
- Description
 - Power Measurement
 - 8 second warm up
 - Measure power once per second for 10 seconds
 - Throw out min and max power measurement
 - Average the 8 power readings left
 - Calculate peak power
 - o 5 iterations of:
 - Noise
 - Reflectivity and Linearity
 - Need I₀ from this
 - o Take out worst of each measurement (Noise, I₀ (shared path))
 - o Average the remaining 4 measurements
 - o Compare to expected
 - Peak Power = 700Kw Transmitter
 - Noise = Adaptation Data
 - Shared Path = Adaptation Data
 - I_0 = Perfect slope and y-intercept
 - o dBZ_0 = Calculated expected and show with measured and adaptation data
 - Show all data, give error estimate for each parameter except dBZ₀

• Setup

Pulse Width	short
Antenna	Park
Clutter Filter	OFF
Point Clutter Suppression	OFF
Transmitter	Radiating as required
Injection Point	Front End
Matched Filter	Same as pulse width (automatic with
	SIGMET)
Receiver Protector	Normal
Noise Source	OFF
CW	ON as required
4 Position Switch	As required
7 Bit Test Attenuator	As required
Other Procedures	

- o Describe
- Parameters/Display

Inputs			
Name	Source	Units	Description
Noise _{Watts}	PMD	W	The previous noise value, used in smoothing the receiver noise value
Noise	A		Short Pulse Noise
DBZ _{0 adapt}	A	dBZ	This is R234 in adaptation data
FE_Shared_Calc			From calibration shared memory

Outputs			
Calibration File			
Name	Туре	Units	Description
Display Data			
Name	Туре	Units	Description
Noise Error		dB	
Power Error		dB	
Path Error		dB	
All measured values			
All expected values			
All dBZ ₀ values		dBZ	

- o Describe
- Algorithm
 - o Data Acquisition
 - Measure Power Meter Zero, save as PowerZero
 - Radiate ON
 - Wait 8 seconds
 - For i = 1 to 10

- Get Power(i) /* Power Bite data, range from 0 to 255 */
- Wait 1 second /* Power Measurements only updated once a second from DAU */
- Radiate OFF
- Calculate Transmitter Peak Power from 10 samples

$$Tx_{ave_meas} = \left(\left(\frac{\sum_{n=1}^{n=10} Power(n)}{\sum_{n=1}^{n=10} Power(n)} - Min(Power()) - Max(Power()) \right) - PowerZero \right) \times TR0$$

$$Tx_{Peak_meas} = \left(10Log(Tx_{ave_meas}) - DC - Tx_{PowMan} + 30 \right)$$
Put The sixth Professional Power and Power an

- Put Tx_{Peak} into Performance Data so it can be used with the following dBZ₀ calculation
- For i = 1 to 5
 - Run Noise check
 - Save Noise_{current}(i) (want noise in watts here)
 - Run Reflectivity and Linearity
 - Convert $I_0(i)$ to milliwatts, $dBZ_0(i)$ to mm^6/m^3 , and $FE_Shared(i)$ to ratio and save /* all these are changing from log by using $10^{value/T0}$. This is more accurate for averaging later*/
 - Wait 2 seconds (or so)
- PRI 5 (nominal PRF of 1013)

Data Calculations

$$Noise_{Meas} = 10 \log_{10} \left(\frac{\left(\sum_{n=1}^{n=5} Noise_{current}(n) \right) - Min(Noise_{current}()) - Max(Noise_{current}())}{3} \right)$$

$$FE_{meas} = 10 \log_{10} \left(\frac{\left(\sum_{n=1}^{n=5} FE_Shared(n) \right) - Min(FE_Shared()) - Max(FE_Shared())}{3} \right)$$

$$I_{0_meas} = 10 \log_{10} \left(\frac{\left(\sum_{n=1}^{n=5} I_0(n) \right) - \min(I_0()) - \max(I_0())}{3} \right) / * \text{ in dBm */}$$

$$(Noise_{meas} - 0) \qquad \text{FF}$$

$$I_{0_{-}\exp} = \left(\frac{Noise_{meas} - 0}{1}\right) - FE_{meas}$$

$$*/$$

$$dBZ_{0_{-}meas} = 10\log_{10}\left(\frac{\left(\sum_{n=1}^{n=5} dBZ_{0}(n)\right) - \min(dBZ_{0}(\cdot)) - \max(dBZ_{0}(\cdot))}{3}\right)$$

$$dBZ_{0_exp} = \left(\left(\frac{Noise_{exp} - 0}{1} \right) - FE_{SharedCalc} \right) + 10\log(C) - (88.45 + PL_Tx) - Ant_Rx$$

 $DC = 10 Log_{10} (PRF * \tau)_{/* \tau \text{ in seconds, should be approximately } -28.2 dB */}$

Error Estimates

- $Tx_{err} = 88.45 Tx_{Peak meas}$
- Noise_{err} = Noise $_$ Short Noise $_$ Short from Adaptation Data */
- $FE_{err} = FE_Shared_Calc FE_{meas}$
- $I_{0_err} = I_{0_exp} I_{0_meas}$
- $dBZ_{0_err} = dBZ_{0_exp} dBZ_{0_meas} /* dBZ_{0_exp} \text{ is not what's in Adaptation Data. */}$
- Display the first 4 as errors, then display:
 - $\bullet \quad dBZ_{0 \ exp} \quad dBZ_{0 \ meas} \quad dBZ_{0 \ adapt}$
 - Below and between, display:
 o dBZ_{0 err} ΔdBZ₀
 - This is so the technician can see the "perfect" dBZ₀ along with the value in AD
 - The error sum from the first 4 should add up to dBZ_{0_error} /* this is not displayed */
- If any error is over 1dB, highlight it somehow.
- Explaining all this will take a little time, and fortunately for the programmer, the explanation will be in the Tech Manual

Long Pulse Reflectivity Error Estimate

- Purpose
 - \circ Estimates the errors in DBZ₀ related to power, noise, calibration linearity, and path in long pulse, the variables for dBZ₀ that change most pulse to pulse.
 - Description
 - o 5 iterations of:
 - Noise
 - Reflectivity and Linearity
 - Power Measurement
 - 8 second warm up
 - measure power once per second for 10 seconds
 - Throw out min and max power measurement
 - Average the 8 power readings left
 - Calculate peak power
 - o Take out worst of each measurement (Noise, I₀ (shared path), Peak Power)
 - o Average the remaining 4 measurements
 - o Compare to expected's /* These are currently estimated, we'll put in actuals later */
 - Peak Power = 700Kw Transmitter
 - Noise = -82dBm, based on adaptation data
 - I₀ (shared path) = -112dBm /* we'll calculate this expected based on shared path and known values */
 - Show all data, give error estimate for each parameter
- Setup
 - Describe

• Parameters/Display

Inputs				
Name Source Units Description				
Noise _{Watts}	PMD	W	The previous noise value, used in smoothing the receiver noise value	

Outputs			
Calibration File			-
Name	Туре	Units	Description
Performance/Ma			
Name	Туре	Units	Description
Display Data			
Name	Туре	Units	Description

- o Describe
- Algorithm
 - o Data Acquisition
 - For i = 1 to 5
 - Run Noise check
 - Save Noise_{current}(i) (want noise in watts here)
 - Wait 2 seconds
 - For i = 1 to 5
 - Run Reflectivity and Linearity
 - Convert I₀(i) to milliwatts and FE_Shared(i) to ratio and save
 - Wait 2 seconds
 - PRI 1 (nominal PRF of 322)
 - Measure Power Meter Zero, save as PowerZero
 - Radiate ON
 - Wait 8 seconds
 - For i = 1 to 10
 - o Get Power(i) /* Power Bite data, range from 0 to 255 */
 - o Wait 1 second
 - Radiate OFF
 - o Data Calculations

$$Noise_{Meas} = 10 \log_{10} \left(\frac{\left(\sum_{n=1}^{n=5} Noise_{current}(n) \right) - Min(Noise_{current}()) - Max(Noise_{current}())}{3} \right)$$

$$I_{0_meas} = 10 \log_{10} \left(\frac{\left(\sum_{n=1}^{n=5} I_0(n) \right) - \min(I_0()) - \max(I_0())}{3} \right)$$

$$FE_{meas} = \frac{\left(\sum_{n=1}^{n=5} FE_Shared(n)\right) - Min(FE_Shared()) - Max(FE_Shared())}{3}$$

$$Tx_{ave_meas} = \left(\left(\frac{\sum_{n=1}^{n=10} Power(n) - Min(Power()) - Max(Power())}{8} - PowerZero \right) \times TR09$$

$$DC = 10Log_{10}(PRF * \tau)_{/* \tau \text{ in seconds, should be approximately } -28.2 \text{dB */}$$

$$Tx_{Pk_meas} = 10Log_{10}(Tx_{ave_meas}) - DC - PL_{Tx} + 30$$

Error Estimates

$$Tx_{err} = 88.45 - Tx_{Pk_meas}$$

Noise
$$_{err} = Noise _Long - Noise _{meas} /* Noise Long from Adaptation Data */$$

$$Tx_{err} = 88.45 - Tx_{Pk_meas}$$

$$Noise_{err} = Noise_Long - Noise_{meas} /* Noise_Long from Adaptation Data */$$

$$FE_{err} = FE_Shared_Calc - 10Log_{10}(FE_{meas}) /* FE_{meas} in ratio */$$

$$I_{0_err} = I_{0_exp} - 10\log_{10}(I_{0_meas})$$

$$I_{0_err} = I_{0_exp} - 10 \log_{10} (I_{0_meas})$$

Full Linearity

- Purpose
 - Uses the test attenuator and both injection points to map the entire receiver transfer curve.
 - Calculates MDS, Dynamic Range, and DBZ₀
 - This test should show degradations in the receiver, and give the technician a good idea of where to start looking for problems.
 - This test uses some alternate means to determine some basic system characteristics to help verify system consistency
- Description
 - Run library routine for Full Linearity 0
 - Calculate MDS, DYN Range, and dBZ₀
 - Display receiver transfer curve graphically
 - Display measured and calculated data
- Setup

- o Describe
- Parameters/Display

Inputs				
Name Source Units Description				
Noise _{Watts}	PMD	W	The previous noise value, used in smoothing the receiver noise value	

Outputs			
Calibration File			
Name	Туре	Units	Description
	_		
Performance/Mainter			
Name	Type	Units	Description
Display Data			
Name	Туре	Units	Description

- o Describe
- Algorithm
 - The technician has no parameters to input, he selects "Run" to start the calibration
 - o Run Noise
 - o Run Dynamic Range
 - o Run Full Linearity
 - o From the data received:
 - If no Low Level Interference (determined in Full Linearity)
 - Display MDS, Dynamic Range
 - O Display the data in a curve with relevant areas highlighted
 - O Display the data for each point in a scrollable table to one side.
 - o Let the technician close the calibration or run it again.

Dynamic Range

Top of the Document

• This test is part of Full Linearity, it will not be run separately MDS

Top of the Document

• This test is part of Full Linearity, it will not be run separately

Noise

- Purpose
 - o Measures the system blue sky noise in short pulse or long pulse


- Description
 - o Park antenna
 - o Run the library routine 5 times
 - Show Noise_Current, Noise_Smoothed, and each iteration's standard deviation.
- Setup

Pulse Width	varies
Antenna	Park
Clutter Filter	OFF
Point Clutter Suppression	OFF
Transmitter	Not Radiating
Injection Point	NA
Matched Filter	Same as pulse width (automatic with
	SIGMET)
Receiver Protector	Normal
Noise Source	OFF
CW	OFF
4 Position Switch	OFF
7 Bit Test Attenuator	103
Other Procedures	

- o Describe
- Parameters/Display

Inputs			
Name	Source	Units	Description
Noise _{Watts}	PMD	W	The previous noise value, used in smoothing the receiver noise value

Outputs				
Calibration File				
Name	Туре	Units	Description	
Performance/Main	tenance Da	ata		
Name	Туре	Units	Description	
Display Data				
Name	Type	Units	Description	
Number		None	Iteration number of noise data taken	
Current Noise		W	The noise value taken for the current iteration	
Standard Deviation		W	The standard deviation of the current noise value	
Smoothed Noise	PMD	W	Current Noise smoothed with Noise value from PMD	
Noise dBm	PMD	dBm	dBm of Smoothed Noise	

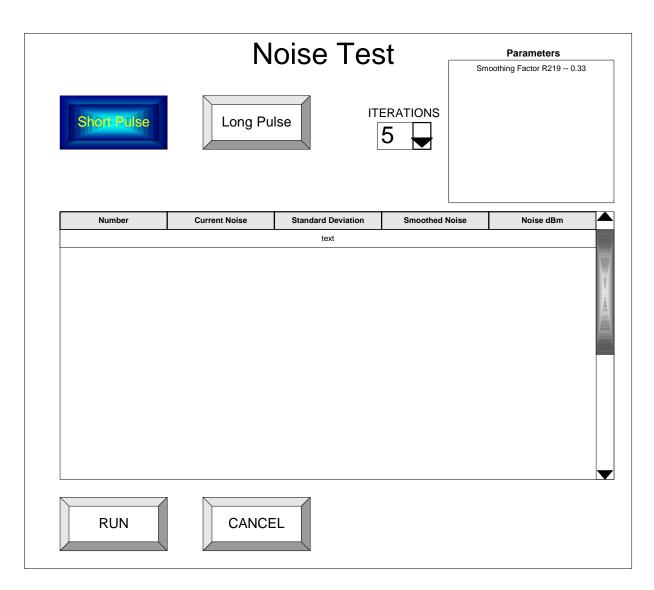

- o Describe
- Algorithm
 - o Park the Antenna
 - o If Park fails, show alarm
 - o If elevation angle <5° and Not Limited Mode (i.e. non-controlling channel)
 - STOP /* can't do noise below 5 degrees */
 - o Provide radio buttons for Long/Short pulse noise
 - o Switch to selected pulse width if necessary
 - o Provide a selection for iterations of Noise desired (input variable "n")
 - Default is 5
 - From 1 to 99 times
 - o When technician pushes start
 - o For ii = 1 to n
 - Run Noise
 - Save results
 - Wait 500 milliseconds
 - O Display results /* results can be displayed as the readings are taken if it's easier */

Noise Temperature

- Purpose
 - o Uses a calibrated Noise Source to determine the receiver Noise Temperature
 - o Calibrates T_C, the antenna Noise Temperature
- Description
 - o Park antenna
 - o Provide radio buttons for Long/Short pulse noise
 - o Switch to selected pulse width if necessary
 - o Provide a selection for iterations of Noise desired (input variable "n")
 - Default is 5
 - From 1 to 99 times
 - When technician pushes start
 - o For ii = 1 to n
 - Run Noise
 - Run Noise Temperature
 - Save results
 - Wait 500 milliseconds
 - o Display results /* results can be displayed as the readings are taken if it's easier */
 - o T_C Calibration
 - Have technician hook up mode adapter with 50 ohm terminator to Receiver Front End
 - Measure Noise Level
 - Record Radome temperature
 - Have technician return to normal configuration
 - Compute T_C
 - Display old and new T_C, ask for confirmation of replacement
- Setup
 - o Describe
- Parameters/Display

Inputs				
Name Source Units Description				
Noise _{Watts}	PMD	W	The previous noise value, used in smoothing the receiver noise value	
$T_{\rm C}$	A	K	Antenna Noise Temperature	

Outputs				
Calibration File				
Name	Type	Units	Description	
Performance/Mainter				
Name	Type	Units	Description	
Display Data	Display Data			
Name	Type	Units	Description	

- Describe
- Algorithm
 - If Controlling Channel
 - Park the Antenna
 - If Park fails
 - Show alarm
 - o If elevation angle <5° and Not Limited Mode (i.e. non-controlling channel)
 - STOP /* can't do noise below 5 degrees */
 - o /* Now for the Fun Part */
 - o Calibrating T_C
 - o Measure Noise Power with all sources off and antenna parked (the usual Noise_{Current}, P_C in equation below)
 - o Prompt the technician to hook up a 50Ω terminated mode adapter to 2A3J1.
 - \circ Measure Noise_{Ref} (P_R in equation below)
 - \circ Save Radome temperature as 273+Radome Temp = T_R /* radome temperature in Kelvin */
 - o Turn on Noise Source with 5dB attenuation
 - o Measure Noise_{ON}
 - o Turn off Noise Source
 - o Prompt technician to remove mode adapter.
 - Check Noise to see if adapter removed
 - Chide technician if mode adapter still connected, don't let him leave screen
 - o Turn on Noise Source again with 5dB attenuation
 - Measure Noise Power, compare to Noise_{ON}.
 - o If difference > 0.1dB
 - Return, don't calibrate
 - o Calculate new T_C

$$T_{C} = \frac{T_{H}(P_{C} - P_{R}) - T_{R}(P_{C} - P_{H})}{(P_{H} - P_{R})}$$

T_{C}	Blue Sky Antenna Temperature in Kelvin measured at Receiver Front End
P _C	Antenna Power Level at IFD in watts
T_R	Dummy Load Ambient Temperature in Kelvin measured at Receiver Front End
P_R	Power Level at IFD with 50Ω Termination at Receiver Front End in watts
T_{H}	Temperature of Noise Source in Kelvin with 5dB attenuation at Receiver Front
	End
P_{H}	Power Level at IFD with Noise Source turned on and 5dB attenuation selected in
	watts

- Show old T_C from adaptation data and new measured T_C
- o Prompt technician to replace with new.
- Do what technician wants.
- Done.

KD

- Purpose
 - Times the KD pulse for reference with Clutter Suppression, compares FE and CAB injection points. Measures the RX Prot isolation
- Description
 - Run the library routine
- Setup

- o Describe
- Parameters/Display

Inputs			
Name Source Units Description			
Noise _{Watts}	PMD	W	The previous noise value, used in smoothing the receiver noise value

	Outputs				
Calibration File	e				
Name	Type	Units	Description		
Performance/N	Iaintenance Da	ıta			
Name	Туре	Units	Description		
Display Data					
Name	Туре	Units	Description		
KD_{range}		m	Range of the KD Pulse in meters		
KD_{FE}		dBm	Power of the KD pulse through the Front End		
KD_{cab}		dBm	Power of the KD pulse through the Cabinet		
KD_{suppr}		dBm	Power of the KD pulse through the Front End with Receiver		
			Protection ON.		

- o Describe
- Algorithm
 - o Show Parameters before we start
 - o After the technician pushes the "RUN" button:
 - Do the KD Check per the Calibration routine
 - Display the results for the technician

Clutter Suppression

- Purpose
 - Measures the Reflectivity clutter suppression of an "ideal" clutter target, the KD pulse
- Description
 - Run the library routine
- Setup
 - o Describe
- Parameters/Display

Inputs			
Name	Source	Units	Description
Noise _{Watts}	PMD	W	The previous noise value, used in smoothing the receiver noise

	<u> </u>					
	Outputs					
Calibration Fil	e					
Name	Туре	Units	Description			
Performance/N	Performance/Maintenance Data					
Name	Туре	Units	Description			
_						
Display Data	Display Data					
Name	Туре	Units	Description			

value

- o Describe
- Algorithm
 - o Describe

RFD

Top of the Document

- Purpose
 - o Check the RF Drive Pulse for amplitude/phase
- Description
 - o Generate RF Drive test pulses and measure them. We need to use a very narrow range (i.e. 25m instead of 250m) to ensure we get the center of the pulse since we can't vary the sample timing
 - O Go to KD pulse mode, measure the phase of the KD pulse
- Alarms

Alarm	Description
Klystron Phase Shift Degraded	Phase shift more than 5 degrees from normal This
	alarm not in system, it's strictly a STS alarm.

• Setup

Elevation	NA (prefer higher angle but not critical)	
Clutter Filter	OFF	
Point Clutter Suppression	OFF	
Interference Suppression	OFF	
Transmitter	Radiating	
W/G Switch	Dummy Load	
Injection Point	Front End	
Matched Filter	Set to Pulse Width (automatic with SIGMET)	
Receiver Protector	Normal	
Noise Source	OFF	
CW	ON	

4 Position Switch	RFD
7 Bit Test Attenuator	25
Phase COHO Select	ON
Other Procedures	KD Check

Parameters

Inputs			
Name	Source	Units	Description
KD _{phase}			

Outputs				
Calibration File				
Name	Туре	Units	Description	
RFD _{range}			Distance to center of RFD pulse	
$\mathrm{RFD}_{\mathrm{FE}}$		dBm	Peak Power measurement of RFD pulse	
RFD _{phase}		Degrees	Phase of RFD pulse	
Performance/Maintenance Data				
Name	Type	Units	Description	
Klystron Phase		Degrees	Phase shift caused by Klystron	

Algorithm

- Turn on RFD's
 - Use Pulse Width "4" to get an RFD at range (approximately 4.5KM)
 - Do not radiate as normal since this will cause PRF Limit faults. Instead, just select RFD transmission to get just the three pulses we need to create RFD's.
- Find Center of Pulse
 - Use 25m resolution and look for it
- Calculate expected RFD magnitude, compare to actual
 - Yep, we'll need to add up all the path losses
- RFD phase and jitter
 - Gather 128 points of IQ data
 - For nn=1 to 128

•
$$Phase(nn) = \tan^{-1}\left(\frac{I_{nn}}{Q_{nn}}\right)$$

$$\sum_{m=1}^{128} RFD _ phase(m)$$

• $RFD_phase(nn) = Phase(nn) - Phase(nn-1)$ $\sum_{m=1}^{128} RFD_phase(m)$ $RFD_avg_phase = \frac{\sum_{m=1}^{128} RFD_phase(m)}{128}$

- RFD_phase_jitter= Standard Deviation of RFD_Phase
- KD Pulse
 - 0dB attenuation

- Go to Pulse Width "3" for the KD pulse at 25m
- Radiate for 8 seconds
- At KD_{range}, Gather 128 points of IQ data
- For nn=1 to 128

•
$$Phase(nn) = tan^{-1} \left(\frac{I_{nn}}{Q_{nn}} \right)$$

•
$$KD _ phase(nn) = Phase(nn) - Phase(nn-1)$$

$$KD_avg_phase = \frac{\sum_{m=1}^{128} KD_phase(m)}{128}$$

- o KD_phase_jitter= Standard Deviation of KD_Phase
- o Display
 - Phase Jitter of KD should be larger than RFD
 - Phase difference should be fixed
 - We need to quantify this
 - .

CW Substitution

- Purpose
 - Uses known input powers to verify receiver power measurements.
- Description
 - The technician uses a Signal Generator to inject a known power into the front end and into the cabinet.
 - We measure the power at the IFD and display expected, measured, and standard deviation for 3 parts:
 - Cabinet
 - Front End
 - Test Path
 - We display the actual error in our measurement.
 - o Ideas /* these are NOT being implemented */
 - Idea 1
 - Signal Generator hooked up, run a surveillance cut at a high angle (e.g. 45°).
 - Calculate where data should be a specific dBZ, see if it is.
 - Look at that range for entire surveillance cut to reduce problems from weather
 - Idea 2
 - Run a surveillance cut at a high angle (e.g. 45°) with KD pulse selected
 - Save dBZ of KD pulse for entire cut
 - o Use 250m bins, not 1km bins
 - o Therefore this cannot be output of DSPC
 - Compare to calculated dBZ for KD pulse
 - Display histogram of KD Pulse
- Setup
 - Short Pulse
 - o Antenna Parked
- Parameters/Display

Inputs				
Name	Source	Units	Description	

Noise _{Watts}	PMD	W	The previous noise value, used in smoothing the receiver noise value

Outputs			
Calibration File			
Name	Туре	Units	Description
Performance/Main	ntenance Da		
Name	Туре	Units	Description
Display Data			
Name	Type	Units	Description

- Algorithm
 - o Run the Reflectivity and Linearity calibration
 - We need Noise_{Current}, I₀ and FE_Shared
 - o Have the technician hook up a calibrated CW RF signal to 4J16
 - The technician injects –40dBm into 4J16
 - o Technician enters exact power injected (show exactly -40.0 as default)
 - Save Power as Test_{IN}
 - Read the Power at the IFD
 - CW_{TESTIN}
 - o Have the technician hook up a calibrated CW RF Signal to 4J15
 - The technician injects –40dBm into 4J15
 - Technician enters exact power injected (show the same value as before as default)
 - Save Power as Test_{OUT}
 - Read the Power at the IFD
 - CW_{TESTOUT}
 - o Have the technician remove the Signal Generator and test for removal and rehookup
 - Use a PopUp that stays on top, and must be answered before continuing
 - When the technician clicks that he's done, let's test
 - All sources off, check noise floor
 - If it's bad (at least 3dB higher or lower than Noise_{Current})
 - o Reshow the window
 - Set CW to 25, inject into Front End
 - Measure Power
 - Set CW to 30, inject into Front End
 - Measure Power
 - If (difference <3dB), then /* Not enough difference in power levels */
 - reshow the window /* we may make a new window for this */
 - We can't leave this until we're sure the Signal Generator is off the system and all the cables are reconnected
 - o Now we've got the data, so let's do something with it

- Add Adaptation data for the critical path from 4J16 to FE Injection (R69+R72) to determine injected power
 - Power_{Injected} = Test_{IN}+PL_W53+ PL_2A3J3 /* R69 + R72 */
- Use Adaptation data to determine the expected power measured from each signal at 4J16 and 4J15
 - J15_{exp}=Test_{OUT}+CAB Shared Calc+PL A36 Pad /* R78 */
 - J16_{exp}= Test_{IN}+PL W53+ PL 2A3J3 +FE Shared Calc
- Compare Measured to Expected
 - $CAB_{error} = J15_{exp} CW_{TESTOUT}$
 - FE_{error}=(J16_{exp} –CAB_{error}) -CW_{TESTIN}
 - TestPath_{error} = (FE_shared FE_{error} Cab_{error}) FE_Shared_Calc /* reasoning: FE_Shared contains the error for the entire path since we assume the critical path is perfect. Therefore, if we subtract what we measure for the common path with our CW Sub, what's left over is the error in the test path to 4J16 */
- Use the noise, slope, and Y-Intercept from Reflectivity and Linearity to calculate an I_o(CW Sub) based on the Power read, compare to I_o

Test Attenuator

Top of the Document

Use Long Pulse to get the Noise Level and Dynamic Range advantage

- Purpose
 - o This test calibrates all the steps of the test attenuator and lets the technician update Adaptation Data with the new calibration
- Description
 - We cannot get linear results from all 104 steps using just one injection point, therefore we must get data from both injection points and correlate them
 - We correct samples for noise
 - This test uses the 0dB attenuation input into the Cabinet as a reference for all other tests.
 - If 0dB attenuation into the Cabinet is above saturation (6dB), we average readings from 4dB and 8dB to set the 0dB reference
 - o It then refers the 0dB Cabinet point to the 32dB Front End Point, and then to 0dB Front End.
 - o The system measures the power from the Front End (FE) Path and the Cabinet (CAB) Path for every attenuation step.
 - We check to see if there's low level CW interference in our data
 - o Using the references, we calculate the expected power at each attenuation for FE and CAB.
 - We determine the error between the expected and measured data at each attenuation.
 - Values above saturation and "in the noise" are not used.
 - The technician views the new calibration and decides whether to accept it into Adaptation Data.

Setup

Pulse Width	Long Pulse
Elevation	Park
Clutter Filter	OFF
Point Clutter Suppression	OFF
Transmitter	Not Radiating
Injection Point	Front End/Cabinet
Matched Filter	Long Pulse
Receiver Protector	Normal
Noise Source	OFF
CW	ON
4 Position Switch	CW
7 Bit Test Attenuator	varies
Other Procedures	Noise

• Parameters/Display

Inputs				
Name	Source	Units	Description	
Noise _{Watts}	PMD	W	The previous noise value, used in smoothing the receiver noise	
			value	
FE_Measure(ii)		dBm	Measured values of CW power at ii attenuation	
CAB_Measure(ii)		dBm	Measured values of CW power at ii attenuation	
FE_exp(ii)		dBm	Expected CW power at ii attenuation	
CAB_exp(ii)		dBm	Expected CW power at ii attenuation	
FE_Noise_exp(ii)		dBm	Noise corrected expected CW power at ii attenuation	
CAB_Noise_exp(ii)		dBm	Noise corrected expected CW power at ii attenuation	
CAB_{ref}		dBm	Cabinet reference for determining expected values	
FE_{ref}		dBm	Front End reference for determining expected values	
FE_Delta_Raw(ii)		dB	Difference between expected and measured for Front End at	
			attenuation ii	
CAB_Delta_Raw(ii)		dB	Difference between expected and measured for Cabinet at	
			attenuation ii	
FE_Delta_Noise(ii)		dB	Difference between noise corrected expected and measured for	
			Front End at attenuation ii	
CAB_Delta_Noise(ii)		dB	Difference between noise corrected expected and measured for	
			Cabinet at attenuation ii	
Delta(ii)		dBm	Best Delta used to correct attenuation at ii	
NewCal(ii)		dBm	The new resulting attenuation at ii	

	Outputs			
Calibration File				
Name	Туре	Units	Description	
Performance/M	aintenance Da	ıta		
Name	Type	Units	Description	
Display Data				
Name	Туре	Units	Description	
Attenuation			The attenuation for calibration results	
Adaptation		dBm	The value currently in adaptation data for the specific attenuation	
NewCal		dBm	The new calibrated Value	
Delta		dB	The delta from "perfect"	

• Algorithm

- o Switch to Setup parameters
- o Run the Noise procedure to get a current noise reading
- o For Front End
 - Switch to FE Injection
 - For ii = 0 to 103
 - Switch to atten of ii
 - FE_Measure(ii)= $10log_{10}(IQ_{power})$ /* Power in dBm */
- o For Cabinet

- Switch to CAB Injection
- For ii = 0 to 103
 - Switch to atten of ii
 - CAB_Measure(ii)= 10log₁₀(IQ_{power}) /* Power in dBm */
- If CAB Measure(0) > 6dB
 - CAB_{ref}= Avg (CAB Measure(4) -4, CAB Measure(8)-8)
- Else 0
- CAB_{ref} = CAB Measure(0) /* This is our reference for all measurements */
- FE_{ref}= FE Measure(32)+(CAB Measure(0)- CAB Measure(32)) /* this is our front end 0 reference */
- /* Now we have the measured data in dBm */
- /* With both curves, we should cover the entire 104 steps of the attenuator from 0 to 103 with data we can use*/
- /* Now calculate the expected values for both arrays
 - Use Noise value to determine expected values so we get more accurate results at low input powers
 - Need to convert dB values to watts to add noise, then convert back */
- For Front End
 - For ii = 0 to 103

•
$$FE_{Exp}(ii) = FE_{ref}-ii$$

•
$$FE_{NoiseExp}(ii) = 10\log_{10} \left(10^{\frac{(FE_{exp}(ii))}{10}} + Noise_{current} \right)$$

- $FE_{\Delta raw}(ii) = FE_{Exp}(ii) FE_{meas}(ii)$
- $FE_{\Delta noise}(ii) = FE_{NoiseExp}(ii) FE_{meas}(ii)$
- For Cabinet
 - For ii = 0 to 103

•
$$CAB_{exp}(ii) = CAB_{ref} - ii$$

•
$$CAB_{NoiseExp}(ii) = 10 \log_{10} \left(10^{\frac{(CAB_{exp}(ii))}{10}} + Noise_{current} \right)$$

- $CAB_{\Delta raw}(ii) = CAB_{Exp}(ii) CAB_{meas}(ii)$
- $CAB_{\Delta noise}(ii) = CAB_{NoiseExp}(ii) CAB_{meas}(ii)$
- /* Now that we have the expected and measured data and deltas, we can calculate each attenuation's correction factor. */
- I still need to decide what to do if we have interference problems! But this should work for a
- From ii = 0 to 103 /*At each data point we check to see if the signal is too far below noise to use, and then check to see which measurement is closer, and that's the one we use*/
 - IF $CAB_{\Delta raw}(ii) < -6$
 - IF $FE_{\Delta raw}(ii) < -6$
 - o Delta(ii)=0
 - Else
- Delta(ii)= $FE_{\Lambda noise}(ii)$
- Else
 - IF $|CAB_{\Delta noise}(ii)| > |FE_{\Delta noise}(ii)|$
 - Delta(ii)= $FE_{\Delta noise}(ii)$
- Delta(ii)= $CAB_{\Delta noise}(ii)$
- Result(ii)=-(ii+Delta(ii))

- o Display Data, highlighting any delta greater than 1dB
- o If any |Delta(ii)| > 1.5
 - Don't allow update to adaptation data
- o Else
 - Give option to update adaptation data

Velocity/Spectrum Width Processing

Top of the Document

- Purpose
 - Inputs known I and Q samples to measure V and W throughout the Nyquist Interval. Verifies proper operation of RVP.
- Description
 - o Run library routine for V/SW Processing
 - o Display V and W expected and measured for every different V and W in the file
 - o Highlight if any values do not match.
- Setup
 - o Describe
- Parameters/Display

Inputs				
Name	Source	Units	Description	
Noise _{Watts}	PMD	W	The previous noise value, used in smoothing the receiver noise value	

	Outputs				
Calibration F	ile				
Name	Туре	Units	Description		
Performance/	Maintenance Da	ıta			
Name	Type	Units	Description		
Display Data					
Name	Туре	Units	Description		
<u>-</u>					

- o Describe
- Algorithm
 - o Describe

Velocity/Spectrum Width

- Purpose
 - o Measures the receiver system capability to measure V and W at 4 selected Nyquist intervals.
- Description
 - o Run Library routine for V/SW
 - o Display V and W expected and measured for each V and W input
 - o Highlight any values out of range
- Setup
 - o Describe
- Parameters/Display

Inputs			
Name	Source	Units	Description
Noise _{Watts}	PMD	W	The previous noise value, used in smoothing the receiver noise value

Outputs				
Calibration Fil	le			
Name	Туре	Units	Description	
Performance/N	Maintenance Da	ıta		
Name	Type	Units	Description	
Display Data				
Name	Type	Units	Description	

- o Describe
- Algorithm
 - o Have a Start/Run button for the technician
 - o Radiate transmitter for 8 second warmup
 - Message on screen saying "Transmitter Warmup"
 - o Run V/SW routine
 - o Show results of each V and W
 - Show any alarms resulting from results

Transmitter Power

- Purpose
 - o Calibrates the Power Monitor to match known transmitter power output
- Description
 - o The technician verifies that they have calibrated the transmitter power (perhaps inputs the measured peak transmitter power)
 - o Radiate transmitter for 8 second warmup
 - o Measure transmitter power for 30 seconds, once per second

- o Throw out high and low readings
- o Average all readings
- o Correct for path to transmitter
- Correct for duty cycle
- o Compare to calibrated peak power
- Use ratio to correct TR9
- Setup
 - Describe
- Parameters/Display

Inputs				
Name	Source	Units	Description	

Outputs				
Calibration File				
Name	Туре	Units	Description	
		KW	Transmitter Peak Power	
Performance/Maint	enance Da	ata		
Name	Туре	Units	Description	
Display Data				
Name	Туре	Units	Description	

- o Describe
- Algorithm
 - o Display current Power Monitor Reading in bits, update every second
 - Ask technician to input calibrated peak power output of transmitter from EHB 6-511 measurement
 - Pwr_{meas}
 - o Park Antenna, select Dummy Load
 - o Do a Power Meter Zero routine and display if out of bounds
 - o Radiate in short pulse, 1000hz
 - o Radiate for 8 seconds warmup
 - o For 30 seconds, record the average transmitter power every second
 - o Throw out the maximum and minimum readings
 - Average the power meter readings
 - o Convert reading to dBm
 - Subtract path losses from TR17 to R51 to get average power at the klystron (TR17, TR18, TR19, TR20, TR21, TR23, TR32, R48, R49, R51) /* assuming power meter readings were mW at the power meter, not corrected for this path already */
 - o Calculate Duty Cycle in dB
 - DC=10log(PRF*PW), PRF=1000, and PW=TR5

$$0 Tx_{peak} = \frac{10^{\frac{(Tx_{ave}-DC)}{10}}}{10^6}$$
 /* Peak power in kW */

$$\circ TR9_{new} = TR9 * \left(Pwr_{meas} / Tx_{peak} \right)$$

- o Show Pwr_{meas}, Tx_{peak}, TR9, TR9_{new}
- o Ask if technician accepts new reading
- o If yes
 - Update adaptation data with TR9_{new}
- o Else
 - Clear everything, start over

Log Amp Detector for RF Test

Top of the Document

- Purpose
 - o Calibrates 4A29 Log Amp Detector for RF testing (RIOS)
- Description
 - o This procedure checks the transfer curve of the 4A29, and also corrects for bias.
 - Input at –5 and –35dBm into the 4A29 using BITE (CW), and calculate the curve (Least Squares Linear Curve Fit).
 - o Compare Long and Short pulse through the transmitter, ensure they're the same.
 - o Calibrate the IF injected test power at 0dBm.
 - o Show all the test points throughout and their expected vs measured levels
 - Allow adaptation data to be updated for 4A29
- Setup

D-1 W: 1d.	NT A
Pulse Width	NA
Elevation	Park
Clutter Filter	NA
Point Clutter Suppression	NA
Transmitter	Not Radiating
Waveguide	Dummy Load
Injection Point	Front End/Cabinet
Matched Filter	NA
Receiver Protector	Normal
Noise Source	OFF
CW	ON
4 Position Switch	CW
7 Bit Test Attenuator	varies
10 Position RF Test Switch	Position 7, Attenuated RF
Other Procedures	None

• Parameters/Display

Inputs					
Name	Source	Units	Description		
Slope	A				
Intercept	A				

	Outputs	
Calibration File		

Name	Туре	Units	Description	
Performance/Maintenance Data				
Name	Туре	Units	Description	
Display Data				
Name	Туре	Units	Description	
Slope Adapt				
Intercept Adapt				
Slope Measured				
Intercept Measured				

- o Describe
- Algorithm
 - o MACROS
 - Obtain A/D Converter measurements
 - Take 10 independent samples
 - Throw out the 2 maximum and the 2 minimum readings
 - Average the remaining 6
 - Convert sample to voltage

$$V = \frac{(Max - Min)}{32768} \times 17.7$$

Convert sample voltage to dBm and back again

$$V = \frac{P - Offset}{Slope}$$

$$P = V \times Slope + Offset$$

- Power_{in}= R34+R59+R65+R107 (Position 7 on 10 Position RF Test Switch, Attenuated RF Input, using CW with 0dB attenuation) /* should be around -6dBm */
- Have technician measure and input exact value for Power_{in}
 - Display value expected from adaptation data as default.
 - Save input value as Power_{in}
- o IF Power_{in}>0 or Power_{in}<-12
 - Can't run this
 - Post unexpected error message, and tell them why
 - Power outside bounds (0 to -12dBm).
- o Turn CW Off
 - Get sample from A/D Converter, save least value as MIN
- o For ii=0 to 5
 - Set 7 bit test attenuator to ii
 - Get sample from A/D converter, record MAX
 - Convert sample to volts
 - Set $V_{samp}(V,(ii+Power_{in}))$
- o For ii=23 to 28
 - Set 7 bit test attenuator to ii
 - Get sample from A/D converter
 - Convert sample to volts
 - Set $V_{samp}(V,(ii+Power_{in}))$
- o Do least squares linear curve fit on data, with (ii+Power_{in}) as "y" values and V as "x" values

- o Slope and intercept are called scale and bias
 - Scale = Slope
 - Bias = Intercept
- O Display current scale and bias with measured scale and bias
- o Ask if new data is accepted
- o If yes
 - put measured slope and intercept into Adaptation Data
- o else
 - don't
 - clear measured values, go back to start